



FIG. 39

NISSAN MOTOR CO., LTD.

ILL No.	PART No.	PART NAME	Quantity SP310 / SPL310	FORMER PART No.
<b>BRAKE MASTER CYLINDER</b>				
	46010-12200	ASS'Y - CYLINDER, brake master .....	1	1
1	46050-12200	ASS'Y - VALVE .....	1	1
2	46046-12200	SEAT - valve .....	1	1
3	46027-12200	SPRING - valve .....	1	1
4	46038-12200	CONNECTOR .....	1	1
5	46042-27260	GASKET - connector .....	1	1
6	26061-12200	SPRING - return, piston .....	1	1
7	46062-27260	SEAT - spring .....	1	1
8	46063-12200	ASS'Y - PISTON, brake master .....	1	1
9	46064-27261	CUP - piston, primary .....	1	1
10	46068-27261	CUP - piston, secondary .....	1	1
11	46080-27260	ASS'Y - ROD, push .....	1	1
12	46071-27260	RING - snap .....	1	1
13	46100-27260	COVER - dust .....	1	1
14	46015-12200	RESERVOIR - brake oil .....	1	1
15	46016-12200	ASS'Y - BAND, oil reservoir .....	1	1
16	46035-12200	ASS'Y - CAP, oil reservoir .....	1	1
17	46039-12200	SEAT - tube .....	1	1

ILL No.	PART No.	PART NAME	Quantity SP310 / SPL310	FORMER PART No.
---------	----------	-----------	----------------------------	--------------------

**STEERING GEAR**

48010-10451	ASS'Y - GEAR, steering .....	1	-	48010-10450
48010-10551	ASS'Y - GEAR, steering .....	-	1	48010-10550
48011-10400	COMP. - HOUSING, steering .....	1	1	48011-04100
48127-30001	BUSHING - idler shaft .....	2	2	(48127-30001)
48206-30800	STUD - housing, front .....	2	2	(48206-30800)
48539-36700	SEAL - oil, rocker shaft .....	1	1	48539-10600
11120-10460	PLUG - drain .....	1	1	(11120-10460)
48201-04100	COVER - rocker shaft .....	1	1	(48201-04100)
48204-10600	GASKET - rocker shaft cover .....	1	1	48204-30800
1-24525	BOLT .....	2	2	(1-24525)
1-24535	BOLT to fix rocker shaft cover .....	2	2	(1-24535)
9-15115	WASHER - lock .....	4	4	(9-15115)
48064-04100	ASS'Y - PLUG, filler .....	1	1	(48064-04100)
48135-30800	SCREW - rocker shaft adjusting .....	1	1	(48135-30800)
9-11347	NUT - lock .....	1	1	(9-11347)
48219-10600	COVER - housing, front .....	1	1	48219-04100
48035-04100	"O" RING - housing cover .....	1	1	(48035-04100)
48210-61000	SHIM - worm bearing 0.76t .....	1	1	48210-0410
48211-61000	SHIM - worm bearing 0.25t .....	1	1	48211-0410
48212-61000	SHIM - worm bearing 0.13t .....	1	1	48212-0410
48213-61000	SHIM - worm bearing 0.05t .....	1	1	48213-0410

ILL No.	PART No.	PART NAME	Quantity SP310 / SPL310		FORMER PART No.
To fix front cover					
	9-11245	NUT .....	1	1	(9-11245)
	9-15115	WASHER - lock .....	3	3	(9-15115)
	1-24518	BOLT .....	2	2	(1-24518)
	48203-10400	COVER - housing, rear .....	1	1	(48203-04100)
	48029-041000	SEAL - oil, worm shaft .....	1	1	(48029-04100)
	48035-04100	"O" RING - housing cover .....	1	1	(48035-04100)
To fix rear cover					
	9-11245	NUT .....	1	1	(9-11245)
	9-15115	WASHER - lock .....	3	3	(9-15115)
	1-24518	BOLT .....	2	2	(1-24518)
	48050-10401	COMP. - JACKET, steering column .....	1	-	(48050-10401)
	48050-10501	COMP. - JACKET, steering column .....	-	1	(48050-10501)
	48053-10500	WASHER - special tack .....	4	4	(48053-10500)
	9-15574	WASHER - plain .....	4	4	
	48054-10400	ASS'Y - BUSHING, column .....	1	1	(48054-10400)
	3-69416	BOLT .....	4	4	3-69414
	48700-10400	ASS'Y - SHAFT, rocker .....	1	1	48100-04100
	48046-30800	RACE - needle roller .....	1	1	(48046-30800)
	48062-30800	PLUG - ball roller .....	1	1	(48062-30800)
	48047-30800	COVER - needle roller .....	1	1	(48047-30800)
	48105-30800	BALL - roller 12.998 Ø .....			(48105-30800)
	48106-30800	BALL - roller 12.993 Ø .....	1	1	(48106-30800)
	48107-30800	BALL - roller 12.988 Ø .....			(48107-30800)

--	--	--	--

ILL No.	PART No.	PART NAME	Quantity SP310 / SPL310		FORMER PART No.
	48108-95960	ROLLER - needle 2.540 Ø .....			(48108-95960)
	48109-95960	ROLLER - needle 2.543 Ø .....	1	1	(48109-95960)
	48110-95960	ROLLER - needle 2.546 Ø .....			(48110-95960)
	48111-95960	SPACER - needle roller .....	1	1	(48111-95960)
	48126-10600	WASHER - thrust, rocker shaft .....	1	1	48126-30800
	48125-10600	WASHER - adjusting, rocker shaft .....	1	1	48125--30800
	48501-10400	ARM - steering gear .....	1	1	48501-04100
	48521-04100	SEAL - dust, rocker shaft .....	1	1	(48521--04100)
	48504-04100	NUT - gear arm .....	1	1	(48504-04100)
	9-21435	PIN - cotter .....	1	1	9-21345
		To fix steering gear ass'y	1	1	
	9-16216	WASHER - lock .....	1	1	(9-16216)
	1-24638	BOLT .....	3	3	(1-24638)
	9-12646	NUT .....	2	2	(9- 12646)
	9-15116	WASHER - lock .....	2	2	(9-15116)

**STEERING WHEEL & HORN PUSH**

48400-10401	ASS'Y - WHEEL, steering .....	1	1	48400-10400
48420-10400	ASS'Y - BUTTON, horn .....	1	1	(48420-10400)
48433-09400	RETAINER - horn button, upper .....	1	1	(48433-09400)
48421-10400	BUTTON - horn .....	1	1	(48421-10400)
48423-09400	CAP - horn button .....	1	1	(48423-09400)
48422-09400	SPRING - button lock .....	1	1	(48422-09400)
48425-09400	SPRING - retainer, lock .....	1	1	(48425-09400)
48440-10400	ASS'Y - SWITCH, horn .....	1	1	148440-104001

--	--	--	--	--

ILL No.	PART No.	PART NAME	Quantity SP310 / SPL310	FORMER PART No.
---------	----------	-----------	----------------------------	--------------------

**REAR SUSPENSION**

55020-09400	ASS'Y - SPRING, rear .....	2	-	55025-10400
55021-09400	LEAF - rear spring (No. 1) .....	2	-	55021-10400
55022-09400	LEAF - rear spring (No. 2) .....	2	-	55022-10400
55023-09400	LEAF - rear spring (No. 3) .....	2	-	
55024-09400	LEAF - rear spring (No. 4) .....	2	-	
55057-09400	BOLT - center, rear spring .....	2	-	55057-10400
9-99204	NUT (to fix center bolt) .....	2	-	(9-99204)
55020-10500	ASS'Y - SPRING, rear .....	u-2	2	(55020-10500)
55247-09400	CLIP - rear spring .....	4	-	55247-10400
55247-10500	CLIP - rear spring .....	u-4	4	(55247-10500)
55262-09400	SEAT - rear spring (R.H) .....	1	1	55262-04102
55266-09400	SEAT - rear spring (L.H) .....	1	1	55266-04102

ILL	PART No.	PART NAME	Quantity	FORMER
-----	----------	-----------	----------	--------

No.		SP310 / SPL310	PART No.
-----	--	----------------	----------

**HOOD LEDGE**

64100-12230	ASS'Y - HOOD LEDGE R.H. ....	1	-	64100-10430
64100-12330	ASS'Y - HOOD LEDGE R.H. ....	-	1	64100-10530
64101-12230	ASS'Y - HOOD LEDGE L.H. ....	1	1	64101-10430

**PRIVATE LOCK & KEY**

80010-10451	SET - CYLINDER LOCK & KEY	1	1	80010-10450
-------------	---------------------------	---	---	-------------

SET INCLUDES FOLLOWING PARTS

ASS'Y - KEY with holder

ASS'Y - LOCK, glove box lid

ASS'Y - HANDLE, trunk lid

COMPLETE - SWITCH, ignition & starter

ASS'Y - CYLINDER, door lock R.H.

ASS'Y - CYLINDER, door lock L.H.

ASS'Y - CAP, filler

CLIP - retaining, cylinder door lock

PACKING - trunk lid handle